

MAGNETIC MOUNTING SYSTEM

INTERNATIONAL
ARMOUR
www.armour.gr



US
PATENT
N° 12152861

 **NTS** TESTED

SM2

MAGNETIC MOUNTING SYSTEM



Instant attach and detach

In a few seconds get a quick and reliable sight mount.

No modifications required

You won't have to drill, file or modify your pistol.

Single time calibration




Just calibrate your sights once, get reliable results every time.

Reliable results every time

The SM2 magnetic mount ensures accuracy.


More versatile than ever

Compatible with **RMR**, **RMS** and **DDP** footprints

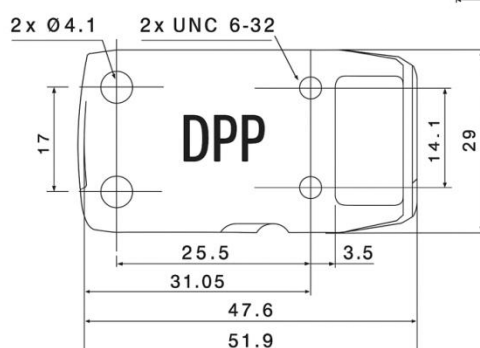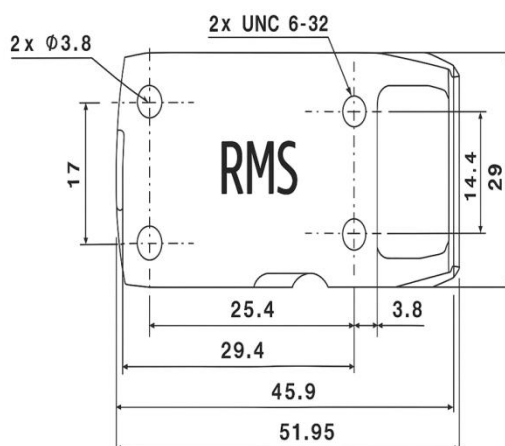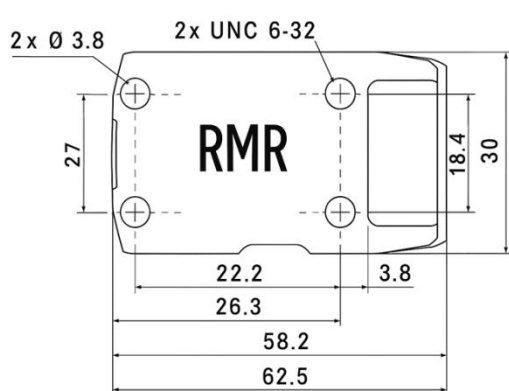


SM2 MAGNETIC MOUNTING SYSTEM


EASY TO ASSEMBLE

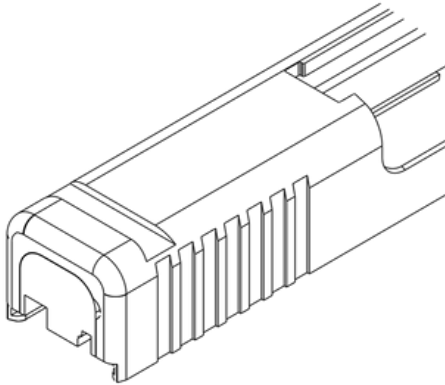

1. With the gun unloaded, remove the original rear sight. If in doubt, please contact a gunsmith.

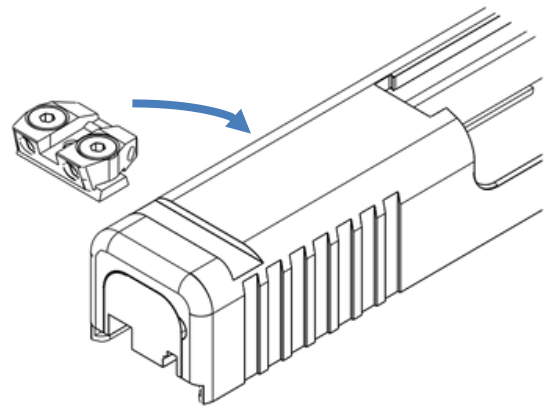


2. Loosen the screws without separating the parts and slide the rear sight assembly into the dovetail as indicated in the diagram.

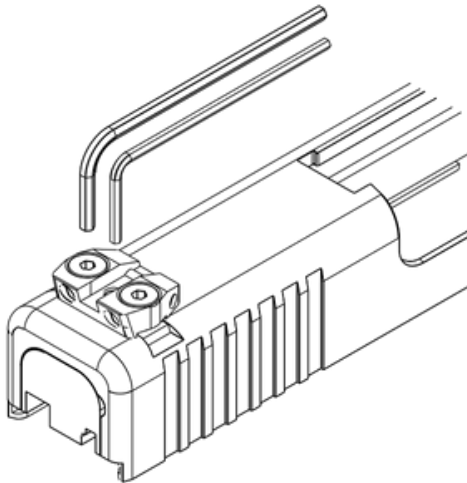


3. Center the rear sight assembly and progressively hand tighten the screws with the supplied Allen key. Do not over tighten. It is advisable to fix the screws with an adhesive intended for this purpose. The recommended tightening order is the side screws first and the center screw last.

4. Position the device by supporting the rear of the sight and rotate down wards to insert the rear sight into the device mount housing until the magnet contacts the top of the pistol slide.

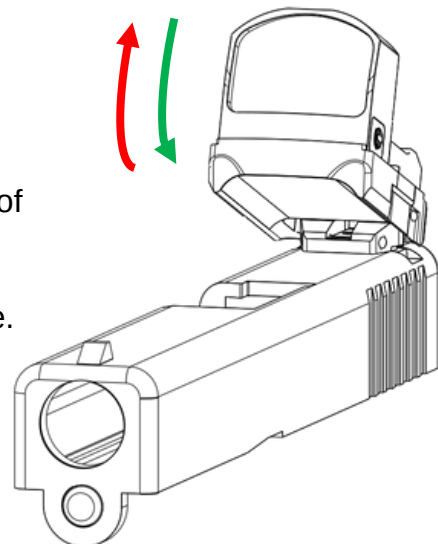


SM2 MAGNETIC MOUNTING SYSTEM

EASY TO ASSEMBLE

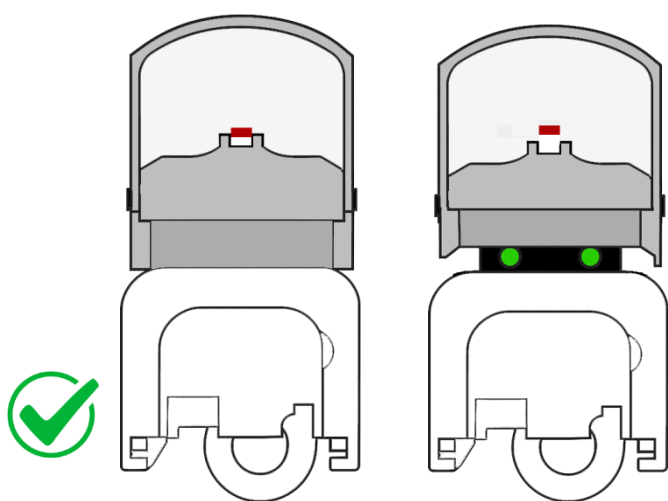

5. To check its correct placement, look at the back of the weapon and verify that, once the device is installed, the rear sight is not visible and is completely hidden.

6. Optionally and for your convenience, you can place the Allen key for adjustment of windage and elevation in the housing located for this purpose on the side of the device, from left to right, which also provides extra fixation.

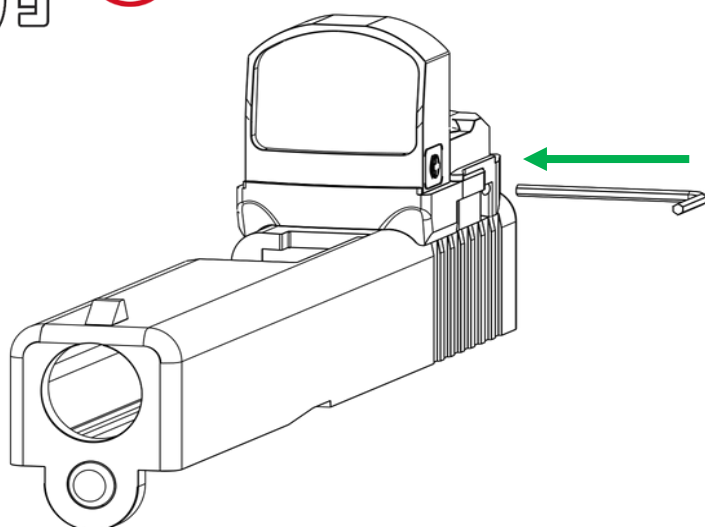

7. In case you want to remove the device from the gun, you must remove the safety Allen key and rotate it in the direction of the red arrow in point 4.

1. Install the new rear sights.

This will serve as the mounting base for the magnetic mounting system

2. Mount your sight in the magnetic mount

No modifications to your pistol or your dot sights required.

3. Just calibrate the first time and done!

Calibrate your new rear sights and you are good to go!

4. You are ready to go!

Setup is done!

